



Wiring diagram brake lining wear indicator, pressure difference warning system and indicator for brake fluid and parking brake

- | | |
|-----------------------------------------------------------------------------|-----------------------------------------------|
| 1 Contact sensor | 3 Switch pressure difference warning system |
| a Brake linings front left | 4 Switch brake fluid checkup |
| b Brake linings front right | 5 Switch pedal-operated parking brake checkup |
| 2 Instrument cluster | 6 Warning instrument (seat warning system) |
| b Checkup brake lining wear indicator | a Fuse No. 15 |
| c Checkup brake fluid, parking brake and pressure difference warning system | b Alternator terminal 61 |
| i Charge indicator | |